

ALTA

PERFORMANCE

R53 Auto Version 2.0 Cold Air Intake System

07/08/10

Thank you for purchasing the ALTA Performance Cooper S intake system. Persons experienced in the proper operation of MINI engines should only perform installation. *Please read through all the instructions before performing the installation, and please make sure to remove the plastic fire wall trim panel!! Removing the trim panel allows for cool pressurized air from the window scoop to enter the intake.*

WARNING: This part is designed, manufactured, and sold solely for use on off-road and racing vehicles not controlled by federal and or local emissions laws. It is not intended for use on vehicles that operate on public streets and highways. Use of this part on emissions controlled vehicles may be in violation of federal or local law! ASMC, LTD. is not responsible for any damages as a result of misuse of this part. Check your local laws prior to use or installation.

SPECIAL NOTES:

- Use of the factory service manual can be very helpful during the installation. These can be purchased at the dealership or online. <http://www.realoem.com> has diagrams for the entire car, which can also be helpful.
- Make sure to clean the excess oil from the inside of the filter base. This will ensure that the filter doesn't slip off intake system.
- We recommend that your filter should be cleaned every 5-10,000 miles, depending on local dust and pollutant levels. A special foam filter cleaning kit is available from our website and dealers. NOTE: Use of other cleaners and oils can damage filter and void warranty.

Parts Included with the ALTA Intake system:

- (1) ALTA Air Box Shroud
- (1) ALTA Air Filter 2.75" ID
- (1) Silicone Inlet hose with 2 spigots on Auto
- (2) #48 hose clamps
- (2) #3 Hose clamps
- (2) #10x.75" SS Sheet Metal screws
- (1) 10-32x.75" SS Phillips screw
- (1) 10-32 SS nut
- (2) #10 SS washers
- (1) 5/16-3/8 reducer
- (1') 5/16" black silicone hose
- (26.5") of Bubble on top trim
- (8") of Bubble on side trim
- (1) Version 2.0 badge

Checked By _____

Removal of factory air box: (FIG 1)

- 1) Open hood and disconnect battery (-) terminal in hatch. (Battery is located below carpet in boot.)
- 2) Cut hose clamps from intake tube. (1) At throttle body, (1) at air box top, (2) fresh air tube
- 3) Remove 10mm bolt connecting air box to motor mount.
- 4) Remove ECU cover and remove (2) ECU plugs. (Plugs have small "pull tabs" that eject them from ECU. Pull these to release plugs.)
- 5) Release (+) battery terminal from passenger side of air box. Leave electrical connections intact.
- 6) Remove air box top and filter (2) screws. Remove lower portion of air box, fresh air tube and intake tube from throttle body.
- 7) **Remove plastic shroud/firewall trim panel!!** (2) "Ball and socket" plastic screws located near bottom of panel, (2) 8mm screws passenger side.
Note: 2003+ models may have additional "pop-it" fastener on driver's side. (FIG 2)

Installation of intake system:

- 1) Re-install (2)"ball and socket" screws into the holes they were removed from. **Do not reinstall plastic shroud/firewall trim pane!** (FIG 3)
- 2) Re-install lower factory air box lower portion. Note: Do NOT re-install 10mm bolt removed earlier at this time! Do not install fresh air scoop yet.
- 3) Slide new shroud into position between the factory air box bottom portion and fuse block.
- 4) Using (2) sheet metal screws provided, attach new shroud to bottom of air box. (FIG 4)
- 5) Re-install (2) 8mm screws through shroud on passenger side.
- 6) Install supplied bolt/nut through hole on drivers side shroud. NOTE: Early 2003 and older cars will require a 3/16" hole to be drilled prior to bolt installation. Use shroud to locate. Use touch-up paint after drilling to prevent rust!
- 7) Re-install (1) 10mm bolt removed earlier through air box into motor mount.


- 8) Install silicone tube over throttle body and align but don't tighten to shroud. Tighten using supplied clamp at throttle body. (remove the throttle body electrical connection to aid in getting to hose clamp)
- 9) Once silicone hose is tightened to throttle body carefully fold back silicone hose and insert the fresh air scoop to air box bottom.
- 10) Automatic transmission Mini S will have 2 spigots on intake.
 - a. Install OEM fittings into each spigot using supplied clamps.
 - b. Connect crank case vent to lower spigot.
 - c. Install supplied reducer fitting into brake booster hose, and route silicone hose in a loop to fit to ALTA intake hose. (this loop is important for routing hard line away from air box)
- 11) Connect silicone intake tube to shroud. Tighten supplied clamp. Note: it helps to reach into shroud to aid in getting silicone over tube.
- 12) Before installing filter make sure to wipe off excess amount of oil from out side of filter. Also make sure to wipe out **ALL Excess Oil** from inside of filter neck and tighten hose clamp. Damage can occur if clamp is tightened too much. If filter proceeds to fall off of connection on box, remove and re-clean. Do not over tighten clamp on filter to try to keep in place.
- 13) Install supplied straight trim seal to air box top on the 3 forward surfaces. Install supplied 90-degree trim to lower passenger side to seal lower portion of air box.
- 14) Re-install factory trim seal to remaining exposed shroud top. Note: Trim factory seal on passenger and driver side of new shroud. Leave small "L" shaped piece on passenger side.
- 15) Re-install (+) battery terminal onto new shroud. Stay is provided on passenger side.
- 16) Re-connect (2) plugs to ECU removed prior. NOTE: TAKE EXTRA CARE NOT TO DAMAGE PINS OF ECU WHEN RE-CONNECTING PLUGS.
- 17) Re-install ECU cover and check all connections and installation. (if throttle body plug was removed earlier, make sure to plug it back in)
- 18) Re-connect - battery terminal and close hatch. Start car.




Plastic screws that need to be removed



Screws installed after wall removed

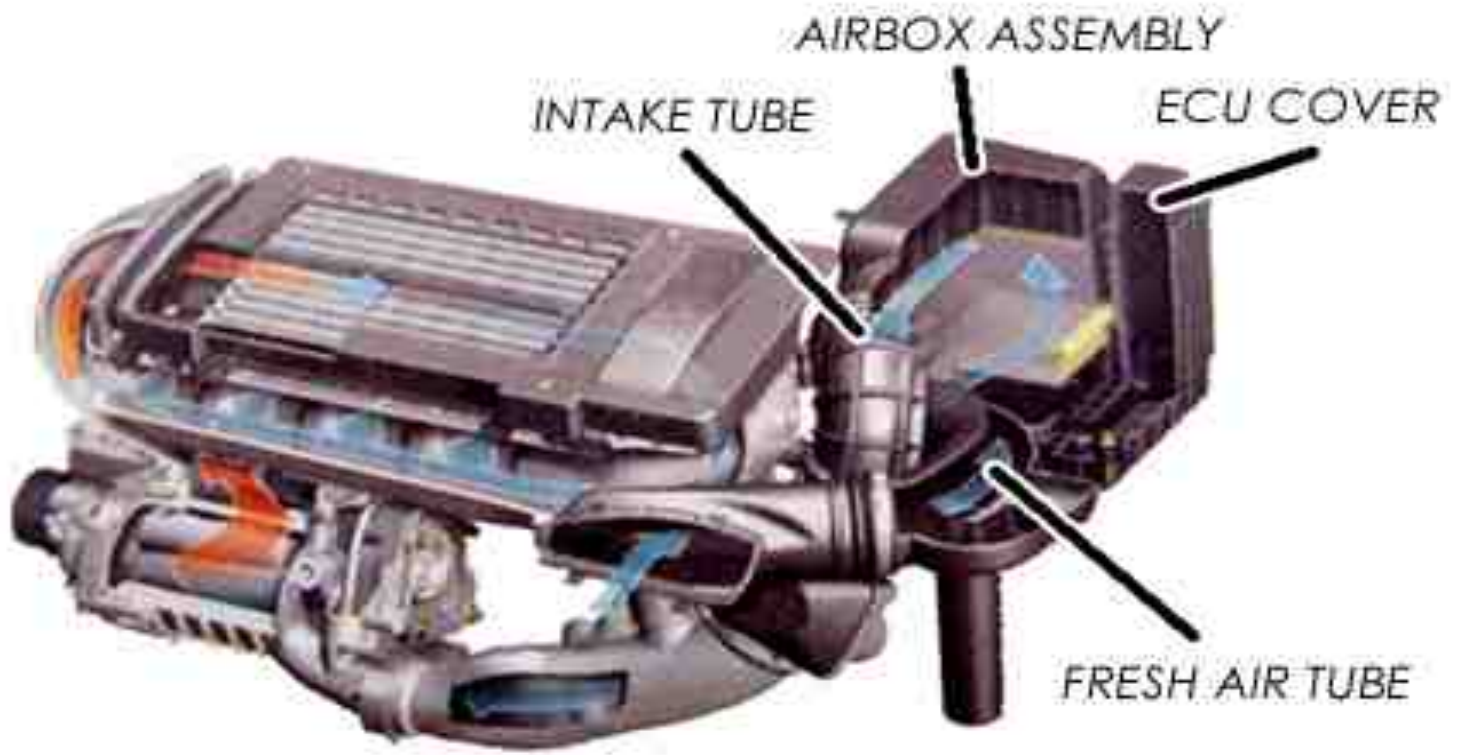

OEM SETUP

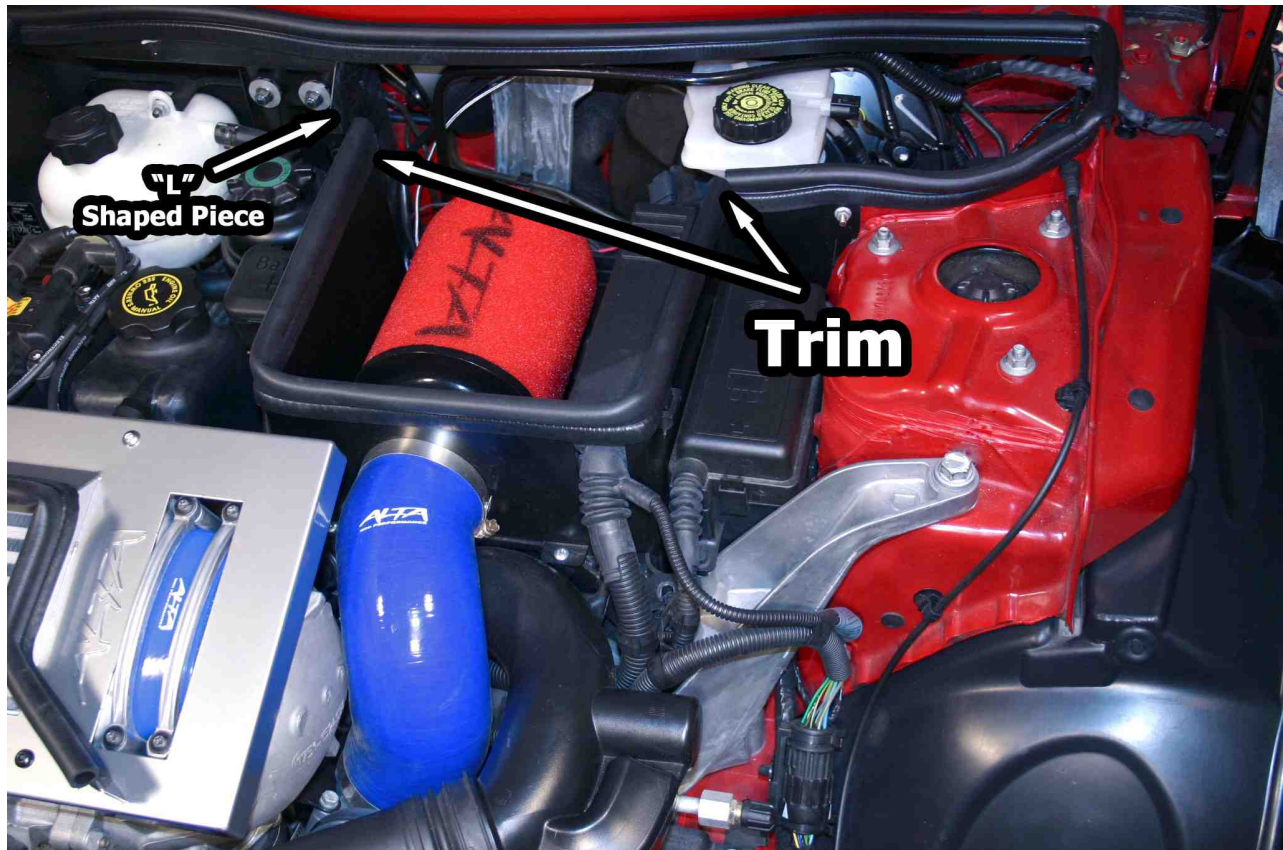

Completed Install: Note trim around box and wall removed

PARTS TO GO WITH YOUR COLD AIR INTAKE:

- *If not purchased with intake, ALTA silicone inlet hose.*
- *ALTA Version 2.0 Air Box Top*
- *ALTA Version 2.0 15%, 17%, or 19% reduction Supercharger pulley.*

For questions & comments please contact
TECH@ALTAMINIPERFORMANCE.COM
503-222-MINI
AIM contact ALTAPERRINSALES